



FWE Moisture Temp Retherm cabinets ship with user friendly touchscreen controls that balance moisture and heat. There are a total of 8 programmable preset slots. Simply choose one of the below pre-programmed settings, or program your own settings into a preset, see next page for instructions. After a preset is selected, the cabinet will cook/retherm, and hold at the specified time, temperatures, and humidity settings.



**1**

### **Crispy Baked Items**

(EX. CHICKEN PATTIES, TOTS, OTHER BREADED PRODUCTS)

**Cook Temp:** 350°F (177°C)

**Cook Time:** 30-45 Mins (Add time for 6+ Pans of Product)

**Moisture Setting:** Off

**Vent Setting:** Open for 3rd & 4th block of cook cycle

**Hold Temp:** 170°F (77°C)

**Hold Vent Settings:** Open

**2**

### **Individual Packaged Items, Re-Therm**

(EX. BREAKFAST SANDWICHES, BURRITOS, LUNCH SANDWICHES, QUESADILLAS)

**Cook Temp:** 300°F (149°C)

**Cook Time:** 25-30 Mins (Add time for 6+ Pans of Product)

**Moisture Setting:** High

**Vent Setting:** Closed

**Hold Temp:** 160°F (71°C)

**Hold Vent Settings:** Closed

**3**

### **Soft Baked Items**

(EX. PIZZA, COOKIES, CAKES)

**Cook Temp:** 350°F (177°C)

**Cook Time:** 25-35 Mins (Add time for 6+ Pans of Product)

**Moisture Setting:** Low

**Vent Setting:** Open for 4th block of cook cycle only

**Hold Temp:** 170°F (76°C)

**Hold Vent Settings:** Closed

**4**

### **Re-Therm / Pre-Cooked Bulk Pan Products**

(EX. CASSEROLES, PASTAS, BAKED BEANS)

**Cook Temp:** 350°F (177°C)

**Cook Time:** 45-55 Mins (Add time for 6+ Pans of Product)

**Moisture Setting:** Medium

**Vent Setting:** Open for 4th block of cook cycle only

**Hold Temp:** 160°F (71°C)


**Hold Vent Settings:** Closed

## How to Set Up Custom Presets



### Step 1

In the presets menu,  
press the lock icon.

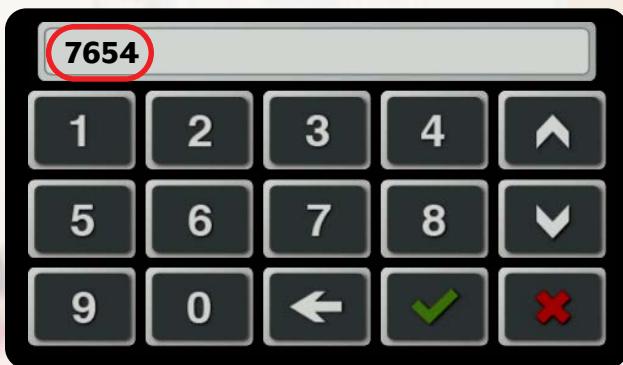


### Step 2

Unlock presets by  
entering the code: 7654  
The code must be entered  
to lock or unlock the  
presets menu. It will not  
re-lock automatically.



### Step 3

Once presets are  
unlocked, long-press  
a preset button for 5  
seconds to edit settings.

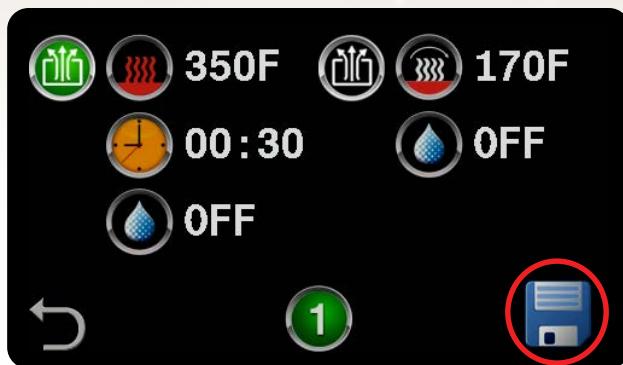

### Step 4

Configure cook and hold  
cycle settings, then press  
the save button.