



# OPERATING INSTRUCTIONS

## ***MOBILE HAND SINK SYSTEM***

Stand-Alone  
Model

*(Shown)*

or  
Mobile Bar  
Built-In  
Model

*(Shown Inside)*



**“HS” SERIES**

**WE OFFER SALES AND SERVICE WORLDWIDE**

Food Warming Equipment Company, Inc.  
5599 Highway 31 West • Portland, TN 37148

**FWE Parts Department:**

815 459 7500

[www.FWEparts.com](http://www.FWEparts.com)

**FAX:**

815 459 7989

# FWE HAND SINK SYSTEM

## Mobile Bar With Built-In Hand Sink



SINK DRAIN

ELECTRICAL OUTLET

MAIN POWER CORD

**WATER HEATER CORD**

WATER PUMP CORD

MAIN POWER  
CORD FEED HOLE

SINK DRAIN ENTRY

Plug in  
WATER  
HEATER  
LAST!

**FRESH WATER  
TANK**



**WASTE WATER  
TANK**

**CONGRATULATIONS**...and thank you for purchasing an FWE Mobile Hand Washing System. Your unit has been designed and manufactured under rigid controls to assure you the most efficient service.

Please take a moment to read through this booklet. By proper set-up procedures, your Hand Washing System will last for many years.

**IMPORTANT:** Your **Manufacturer Registration Card** must be returned within 30 days after initial delivery to activate the warranty.

*Do **NOT** connect to **WATER HEATER** to power source  
until **WATER HEATER** is full of water!*

## **SET-UP TANKS AND WATER HEATER:**

1. Fill **FRESH WATER TANK** with cold, potable water.
2. Insert the **SIPHON HOSE** (Intake Hose) from the PUMP into FRESH WATER TANK.
3. Make sure that the HOSE is all the way to the **BOTTOM OF TANK**.
4. Insert the SINK DRAIN into the top hole of the **WASTE WATER TANK**.
5. Insert plug of the **LONG POWER CORD** into a dedicated electrical outlet.  
(Bar Sink Model: Cord feeds through plug hole in front side of bar.)
6. Connect the **WATER PUMP CORD** into the electrical outlet **inside** the cart.  
The **PUMP** will run when faucet is turned on.
7. Open the **COLD** water faucet until water flows freely with **NO AIR BUBBLES**.
8. Open the **HOT** water faucet until water flows freely with **NO AIR BUBBLES**.
9. **WATER HEATER** is now full. Connect the **WATER HEATER CORD** into the electrical outlet **inside** the cart.

## **OPERATION:**

When the faucets are turned **OFF**, the pump will automatically shut off.  
When the faucets are turned **ON**, the pump will turn on **UNLESS THERE ARE AIR BUBBLES**. RUN MORE WATER until the bubbles are out.

When the **FRESH WATER TANK** is **empty**, the pump will draw air bubbles into the system. The FRESH WATER TANK must be exchanged or refilled.  
**Disconnect the pump from the electrical outlet until the tank can be exchanged or refilled.**

- Do NOT let the PUMP RUN DRY for more than 2 minutes:  
Damage to the pump may result.
- **NO POWER?** Check the RESET BUTTON on the GFCI Electrical outlet located in the cart.
- Do NOT let the WASTE TANK overflow.  
Dispose of waste water in a sanitary drain only.
- SINK DRAIN must be inserted into the WASTE WATER TANK at all times.  
(unless connected to a sanitary drain)
- Empty **WATER HEATER**, FRESH WATER TANK, and WASTE WATER TANK after each usage.

# **FWE HAND SINK SYSTEM**

## **LIMITED TWO YEAR WARRANTY**

**FWE / Food Warming Equipment Company, Inc.** (Seller) warrants to the original purchaser, subject to the exceptions and conditions below, that FWE manufactured equipment shall be free from defects in material or factory workmanship, under ordinary use for the purpose for which it is designed. The effective warranty period is as follows:

**PARTS:** Seller will furnish without charge to the original purchaser, FOB Sellers' factory, replacement parts for repairs to all new standard catalog products and factory custom / modified units, which in Seller's sole judgement, prove defective in materials or workmanship under normal and proper use with the reserved right to request the return of any part claimed to be defective, prior to issuing replacement part or authorizing warranty service, for a period of two (2) years from date of original shipment from Seller's plant, except for equipment used in a **Correctional Environment / Facilities**, which is warranted for a period of one (1) year from date of original shipment from Seller's plant.

**LABOR:** Seller's labor warranty shall be performed by a Seller-approved Service Agency who must contact Seller to obtain a Warranty Service Authorization (WSA) number prior to performing any repairs. If service is required during overtime periods, the difference between overtime and standard labor rates shall be paid by the purchaser. Seller does not assume any responsibility for any charges not expressly authorized, incidental to the repair or replacement of equipment covered by this warranty, nor charges exceeding, in Sellers sole judgement, normal and customary amounts. Only approved travel charges will be allowed. Seller's labor warranty shall be from the date of original shipment date from Seller's plant for a period of one (1) year, except for equipment used in a **Correctional Environment / Facilities** which is warranted for a period of six (6) months.

This warranty is for normal usage and does not apply to any product or parts thereof that have been misused, altered, or where Seller's operating instructions or specific voltage is not observed; nor shall this warranty apply to defective products or parts resulting from accident following date of original shipment, nor extend to or cover removal, installation, reinstallation or calibration, or service calls or cost of repairs undertaken by a customer. This warranty is also subject to the following:

- 1.] Customer returning the warranty registration card, accompanying Sellers original shipment, to Seller within thirty (30) days of receipt;
- 2.] Giving immediate notice of any allegedly defective part or product to Seller; and
- 3.] Customer, at Sellers request, returning said defective parts or product to Seller.

This is the sole warranty applicable to the merchandise. It is expressly understood that Seller's liability hereunder is limited to the repair or replacement, at Seller's option, of products or parts, defective materials or workmanship as provided above. Seller's judgement as to the cause and nature of any defect will be final. Seller shall in no case be responsible for special or consequential damages or any other obligation or liability with respect to products sold by Seller.

This warranty, as stated above, applies to equipment installed in the Continental United States. FWE equipment installed outside the Continental United States shall carry parts coverage only. All labor costs are approved on a discretionary basis, based on like repairs in the Continental U.S. This warranty shall stand in whole or in part as allowed by law. Any exclusion of a part of this warranty, as may be allowed by law, shall not void balance of warranty.

This is a limited warranty pursuant to the Consumer Product Warranties Act, 15 U.S. Code. section 2303.  
© 2003 Food Warming Equipment Co., Inc.