



Ensuring your plates and plate covers are measured correctly is crucial for a perfect fit, and it's the initial step in selecting the right banquet cabinet. Follow these straightforward instructions to obtain precise measurements before consulting a spec sheet.

PLATE DIAMETER: Measure across full diameter of the plate with a tape measure, pulling to create slight tension on the tape measure. Make note of the exact measurement shown.

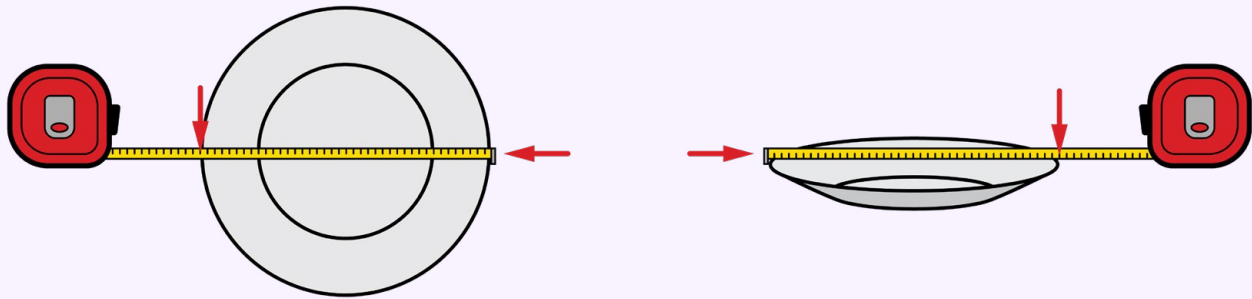

COVER DIAMETER: Place the plate cover top-side-down. Measure across full diameter of the plate cover with a tape measure, pulling to create slight tension on the tape measure. Make note of the exact measurement shown.

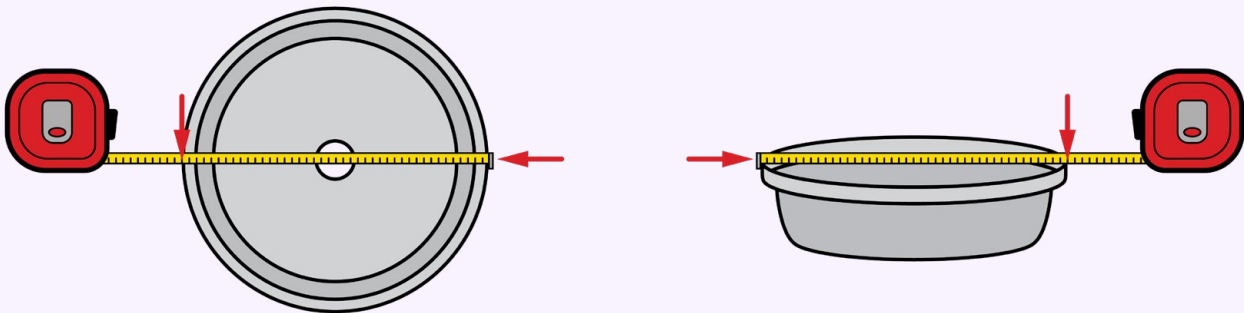

COVERED PLATE HEIGHT: Place the plate cover on top of the plate. Put the end of the tape measure on the table surface, and measure up to the top of the cover. Viewing the height at eye-level, make note of the exact measurement shown.

